
4K Video Conference Camera



User Manual English(V1.0)

Copyright Notice

All contents of this manual, whose copyright belongs to our Corporation cannot be cloned, copied or translated without the permission of the company. Product specifications and information which were referred to in this document are for reference only. We may change, delete, or update any content at any time and without prior notice.

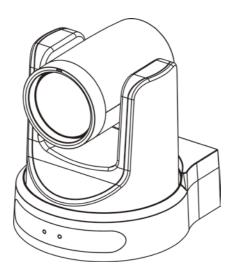

This is class A production. Electromagnetic radiation at specific frequencies may affect the image quality of TV in home environment.

Catalogue

1	Note.		1
2	Packi	ng List	1
3	Quick	Start	1
4	About	Product	3
	4.1	Features	3
	4.2	Product Specification	3
	4.3	Interfaces and Buttons	5
	4.4	Dimension	5
	4.5	Remote Control	6
	4.6	RS232 Interface	7
	4.7	VISCA Network	8
	4.8	Serial Communication Control	8
5	GUI S	Settings	8
	5.1	MENU	8
	5.2	EXPOSURE	8
	5.3	COLOR	9
	5.4	IMAGE	9
	5.5	P/T/Z	10
	5.6	NOISE REDUCTION	10
	5.7	SETUP	10
	5.8	COMMUNICATION SETUP	10
	5.9	RESTORE DEFAULT	11
6	Netwo	ork Function	11
	6.1	Operating Environment	11
	6.2	Equipment Installation	11
	6.3	Internet Connection	11
	6.4	Camera Controlled by LAN	11
		6.4.1 Setup IP Address	11
		6.4.2 Visit/Access Camera	12
	6.5	Camera Controlled by WAN	13

		6.5.1	Setup IP Controlled by Dynamic DNS	13
		6.5.2	Dynamic DNS Visit Camera	13
		6.5.3	VLC Stream Media Player Monitor	13
	6.6	Camer	a Parameter Setup	14
		6.6.1	Homepage Introduction	14
		6.6.2	Video Settings	16
		6.6.3	Image Settings	17
		6.6.4	Audio Settings	17
		6.6.5	System Settings	18
		6.6.6	Network Settings	18
		6.6.7	Device Information	19
	6.7	Downle	oad the Upgrade Program	19
7	Mainte	enance	e and Troubleshooting	19

1 Note

Electric Safety

Installation and operation must accord with electric safety standard.

Use Caution to Transport

Avoid stress, vibration or soakage in transport, storage and installation.

Polarity of Power Supply

The power supply of this product is +12V, the max electrical current is 2A. Polarity of the power supply plug drawingshows as below.



InstallationPrecautions

Do not grasp the camera lenswhen carrying it.Don't touch camera lens by Mechanical damage may be caused by doing

Do not use in corrosive liquid, gas or solid

environment to avoid any cover (plastic material) damage. Make sure there is no obstacle within rotation range.

Please never power on before installation is completed.

Do not Dismantle the Camera

We are not responsible for any unauthorized modification or dismantling.



Specific frequencies of electromagnetic field may affect the image of the camera!


2 Packing List

When you unpack, check that all the supplied accessories are included:

Name	Quantity
Camera	1
AC Power Adaptor	1
Power Cable	1
RS232 Cable	1
Remote Control	1
User Manual	1

3 Quick Start

1) Please check connections are correct before starting.

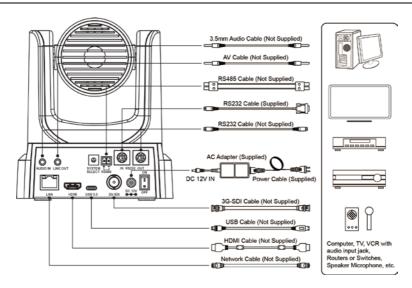

- Connect the power adapter to the power connector on the rear panel of the camera.
 The power indicator on the front panel of the camera is on.
- After the camera is powered on, it starts to initialize, right up to the limit position, and then both horizontal and vertical go to the middle position, the motor stops running, and the initialization is completed. (Note: If preset 0 is saved, PTZ will be move to preset 0)

4 About Product

4.1 Features

4K Ultra HD

With a new generation of SONY 1/2.5-inch, maximum 8.51 million pixels high-quality UHD CMOS sensor, 4K (3840x2160) ultra-high resolution images are available. And backward compatible with 1080P, 720P and other resolutions.

• 71° Wide-angle Lens + 12x Optical Zoom

Exclusively customized high-quality 8 million ultra-high resolution 4K super wide-angle lens, 12x optical zoom, horizontal field of view up to 71°.

HDMI 2.0

Support HDMI 2.0 specification, can directly output 4K uncompressed digital video.

Low Power Sleep Function

It supports low-power sleep/wake-up and consumes less than 400mW in sleep mode.

Local Storage

Support U disk local storage, local recording directly without NVR.

LowLight

The application of 2D and 3D noise reduction algorithm greatly reduces image noise. Even under the condition of ultra-low illumination, it still keep the picture clean and clear, and the SNR of image is as high as 55dB.

Multiple Interfaces

It supports HDMI2.0 HD output, and also equipped with 3G-SDI interface, the effective transmission distance up to 150 meters (1080P30). HDMI, 3G-SDI, USB3.0, LAN four channels can simultaneously output 4 channels of high-definition digital signals.

Remote Control

Through the RS232 and RS485 serial ports, the camera can be controlled remotely.

Built-in Gravity Sensor

It supportsimage auto flip function for easy installation and use.

Intelligent Exposure

Effectively solve the impact of projection, TV and other equipment on the people who are photographing.

Dual Power Supply

It supports dual power supply (USB IN 5V and DC IN 12V).

4.2 Product Specification

Name	4K Video Conference	
Name	Camera	
Camera		
Signal System	4K@60fps, 4K@50fps, 4K@30fps, 4K@25fps, 4K@59.94fps,4K@29.97fp s, 1080P@60fps, 1080P@50fps, 1080I@60fps,1080I@50fp , 1080P@30fps,1080P@59. 94fps, 1080I@59.94fps, 1080P@29.97fps, 720P@60fps,720P@59.94 fps	
Sensor	1/2.5 inch, CMOS, Max Effective Pixel: 851M	
Scanning Mode	Progressive	
Lens	12x, f=4.4mm ~ 52.8mm, F1.8 ~ F2.6	

Digital Zoom	16x
Minimum	0.5 Lux @
Illumination	(F1.8, AGC ON)
Shutter	1/30s ~ 1/10000s
White Balance	Auto, Indoor, Outdoor, One Push, Manual, VAR
Backlight Compensation	Support
Digital Noise	2D&3D Digital Noise
Reduction	Reduction
Signal Noise Ratio	≥55dB
Horizontal Angle of View	71° ~ 8.2°
Vertical Angle of View	42.7° ~ 4.5°
Horizontal Rotation Range	±170°
Vertical Rotation Range	-30° ~ +90°
Pan Speed Range	1.7° ~ 100°/s
Tilt Speed Range	1.7° ~ 69.9°/s
H & V Flip	Support
Image Freeze	Support
Local Storage	Support
Number of Preset	255
Preset Accuracy	0.1°
USB Features	
Operate System	Windows 7/8/10, Mac OS X, Linux, Android
Color System /	YUV 4:2:2 / H.264 /
Compression	MJPEG / NV12
Video Format	YUY2: max to 1080P@30fps H.264 AVC/SVC/MJPEG: max to 4K@60fps
USB Audio	Support
USB Video Protocol	UVC 1.1~1.5
UVC PTZ	Support
	<u> </u>


Network Features		
Video H.264/MJPEG		
Compression		
Video Stream	First Stream,	
-	Second Stream	
=:	3840x2160,1920x1080,	
First Stream	1280x720,1024x576,	
Resolution	960x540,640x480, 640x360	
	1920x1080,1280x720,	
	1024x576, 720x576 (50Hz	
Second Stream	support), 720x480 (60Hz	
Resolution	support), 720x408,	
	640x360, 480x270,	
	320x240, 320x180	
Video Bit Rate	32Kbps ~ 20480Kbps	
Bit Rate Type	Variable Rate, Fixed Rate	
Frame Rate	50Hz: 1fps ~ 50fps,	
Frame Rate	60Hz: 1fps ~ 60fps	
Audio	AAC	
Compression	AAC	
Audio Bit Rate	96K, 128K, 256K	
	TCP/IP, HTTP, RTSP,	
Protocols	RTMP, ONVIF, DHCP,	
	Multicast, etc.	
Input/Output Inte	rface	
AUDIO IN	1 x AUDIO IN: 3.5mm	
Interface	Audio Interface	
LINE OUT	1 x LINE OUT: 3.5mm	
Interface	Line Out Interface	
	1 x RS485: 2pin phoenix	
	port, Max Distance:	
	1200m, Protocol: VISCA/	
	Pelco-D/Pelco-P 1xRS232 IN: 8pin Min	
Communication	DIN, Max Distance: 30m,	
Interface	Protocol: VISCA/Pelco-D	
IIIGHACE	/Pelco-P	
	1 x RS232 OUT: 8pin Min	
	DIN, Max Distance: 30m,	
	Protocol: VISCA network	
	use only	
Network	1xRJ45: 10M/100M	
Interface	Adaptive Ethernet Ports	
	1x3G-SDI: BNC type,	
3G-SDIInterface	800mVp-p, 75Ω. Along to	
	SMPTE 424M standard	

	T
HDMIInterface	1 x HDMI: Version 2.0
USBInterface	1 x USB3.0: Up to 4K@60fps compressed video and 1080P original video can be output
Power Jack	JEITA type (DC IN 12V)
Physical Parameter	
Input Voltage	DC 12V / USB 5V
Current Consumption	1.0A(Max)
Operating Temperature	-10°C ~ 40°C
Storage Temperature	-40°C ~ 60°C
Power Consumption	12W(Max)
MTBF	>30000h

4.3 Interfaces and Buttons

Size

Net Weight

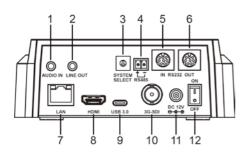



1.35Kg


168.4 x 141.5 x 164.5mm


Item	Name	
1	AUDIO INInterface	
2	LINE OUTInterface	
3	System Select Switch	
4	RS485 Interface	
5	RS232 IN Interface	
6	RS232 OUT Interface	
7	Network Interface	
8	HDMI Interface	
9	USB 3.0 Interface	
10	3G-SDI Interface	
11	DC 12V Interface	
12	Power Switch	

4.4 Dimension

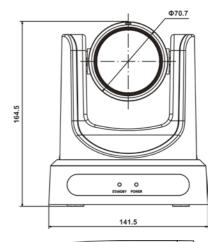


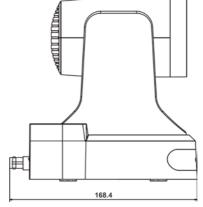

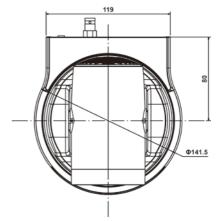

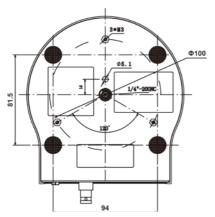

4.5 Remote Control

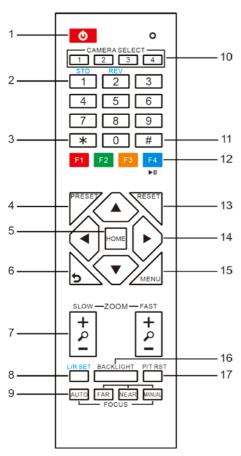

Key Description

1. Standby Key

Press this button to enter standby mode. Press it again to enter normal mode.

Note: Power consumption in standby mode is approximately half of the normal mode

2. Number Key

To set preset or call preset.

3. *Key

Used with other buttons.

4. Preset Key

Set preset: Store a preset position.

[SET PRESET] + Numeric button (0-9): Setting a corresponding numeric key preset position.

5. HOME Kev

Confirm menu, enter the submenu or the PTZ will back to the middle position after pressed it

6. Return Kev

Return back the last level menu

7. Zoom Key

Slow Zoom: Zoom In [+] or Zoom Out [-] slowly Fast Zoom: Zoom In [+] or Zoom Out [-] fast

8. Left/Right Setting Key

Press with 1 button and 2 button setting the direction of the Pan-Tilt.

- Simultaneously pressL/R Set +1[STD]: set the Pan-Tilt turn the same direction as the L/R Set
- Simultaneously pressL/R Set +2[REV]: set the Pan-Tilt turn the opposite direction as the L/R Set.

9. Focus Kev

Used for focus adjustment.

Press [AUTO] adjust the focuses on the center of the object automatically.

Press [MANUAL] adjust the focus on the center of the object manual.

MANUAL button, and adjust it with [Far] (Focus on far object) and [NEAR] (Focus on near object).

10.Selection Key

Press the button corresponding to the camera you want to operate with the remote controller.

11. #Key

Used with other buttons.

12. IR Remote Control Key

[*]+[#]+[F1]: Address 1

[*]+[#]+[F2]: Address 2

[*]+[#]+[F3]: Address 3

[*]+[#]+[F4]: Address 4

13. Reset Key

Clear preset: Erase a preset position.
[CLEAR PRESET] + Numeric button (0-9)
Or: [*]+[#]+[CLEAR PRESET]: Erase all the presetindividually.

14. PTZ Control Key

Press arrow buttons to perform panning and tilting. Press [HOME] button to face the camera back to front.

15. Menu Kev

MENU: enter or exit OSD MENU.

16. Backlight Key

BLC ON/OFF: Press this button to enable the backlight compensation. Press it again to disable the backlight compensation.

NOTE:

- Effective only in auto exposure mode.
- If a light behind the subject, the subject will become dark. In this case, press the backlight ON/OFF button. To cancel this function, press backlight ON/OFF button.

17. PTZ Reset Key

Preset Pan/Tilt self-test.

18. Image Freezing Function


Manually freeze: Open the freezing function after press the remote control [F4], display "Freeze" on the left upper corner character, after five seconds display disappear automatically. If you want to cancel the freeze, press [F4] key and then can return to normal, display "Unfreeze" on the left upper corner, after five seconds display will disappear automatically.

Recalling the Preset image Freeze: By the OSD Menu "Image Freeze" to setrecalling the preset image freeze function. After the function is opened, the screen will stay in before Recalling the Preset when Recalling the Preset, the screen can be switched to the preset position screen until the camera points to the preset position.

19. Shortcut Set

[*]+[#]+[1]: OSD menu default English [*]+[#]+[3]: OSD menu default Chinese [*]+[#]+[4]: Display currentIP address [*]+[#]+[6]: Quickly recover the default [*]+[#]+[8]: View the camera version [*]+[#]+[9]: Quickly set up inversion [*]+[#]+[MANUAL]: Restore default IP address

4.6 RS232 Interface

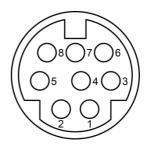

No.	Function
1	DTR
2	DSR
3	TXD
4	GND
5	RXD
6	GND
7	IR OUT
8	NC


The correspondence between the camera and Windows DB-9 pin:

Camera	Windows DB-9	
1.DTR 🔪	1.CD	
2.DSR	→ 2.RXD	
3.TXD	3.TXD	
4.GND —	4.DTR	
5.RXD	5.GND	
6.GND	¥6.DSR	
7.IR OUT	∠ 7.RTS	
8.NC	€ 8.CTS	
	9.RI	

The correspondence between the camera and the Mini DIN pin:

Camera	Mini DIN
1.DTR —	1.DTR
2.DSR ←	2.DSR
3.TXD 🔪	✓ 3.TXD
4.GND —	4.GND
5.RXD	→ 5.RXD
6.GND	6.GND
7.IR OUT	7.NC
8.NC	8.NC

4.7 VISCA Network

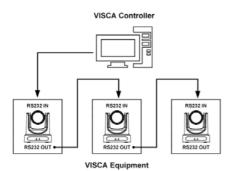

4.8 Serial Communication Control

RS232 Communication Control

The camera is controlled via RS232. The RS232 serial port parameters are as follows: Baud rate: 2400/4800/9600/38400 bit/s:

Starting Position: 1 bit

Data bit: 8 bits Stop bit: 1 bit Check digit: None

RS485 Communication Control

Control camera via RS485, half duplex mode:

Baud rate: 2400/4800/9600/38400 bit/s;

Starting position: 1 bit
Data bit: 8 bits

Stop bit: 1 bit Check digit: None

After power on, the camera goes to the upper right limit and then back to the middle position. The zoom lens is pulled to the farthest position,


auto focus, and the aperture is adjusted to the default value. If the camera has preset 0 saved, the camera will be set to position 0 after the initialization is completed. At this point, the user can use the serial port command to

control the camera.

5 GUI Settings

5.1 MENU

Press [MENU] button to display the main menu on the normal screen, using arrow button to move the cursor to the item to be set. Press the [HOME] button to enter the corresponding sub-menu.

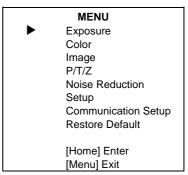

5.2 EXPOSURE

Move the main menu cursor to [EXPOSURE], and press [HOME] key enter the exposure page, as shown in the following figure.

EXPOSURE		
•	Mode	Auto
	ExpCompMode	On
	ExpComp	+1
	Backlight	Off
	Gain Limit	15
	Anti-Flicker	50Hz
	Meter	Average
	DRC	2
▲ ▼Select Item		
[Menu] Back		

Mode: Exposure mode, optional items: Auto,

Manual, SAE, AAE, Bright.

ExpCompMode: Exposure the compensation mode, optional items: On, Off (Effective only inAutomode).

ExpComp: Exposure the compensation value, optional items: -7~7 (Effective only in ExpCompMode item to On).

Backlight: Set the backlight compensation, optional items: On, Off (Effective only in Auto mode).

Bright: Intensity control, optional items:0~17 (Effective only in Bright mode).

Gain Limit: Maximum gain limit, optional items: 0~15 (Effective only in Auto, SAE, AAE, Bright mode).

Anti-Flicker: Anti-flicker, optional items: Off, 50Hz, 60Hz (Effective only in Auto, AAE, Bright mode).

Meter: Optional items: Average, Center, Smart, Top.

Iris: Aperture value, optional items: F1.8, F2.0, F2.4, F2.8, F3.4, F4.0, F4.8, F5.6, F6.8, F8.0, F9.6, F11.0, Close (Effective only in Manual, AAE mode).

Shutter: Optional items: 1/30,1/60,1/90,1/100,1/125,1/180,1/250,1/350, 1/500,1/725,1/1000,1/1500,1/2000,1/3000,1/4 000,1/6000,1/10000 (Effective only in Manual, SAE mode).

Gain: Optional items: $0 \sim 7$ (Effective only in Manual mode).

DRC: DRC strength, optional items: 0 ~ 8.

5.3 COLOR

Move the main menu cursor to [COLOR], and press [HOME] key enter the color page, as shown in the following figure.

COLOR				
•	WB Mode	Auto		
	RG Tuning	+2		
	BG Tuning	+1		
	Saturation	100%		
	Hue	7		
	AWB Sens	High		
▲ ▼Select Item				

WB-Mode: White balance mode, optional items: Auto, Indoor, Outdoor, One Push, Manual. VAR.

RG Tuning: Red gain fine-tuning, optional items: -10 ~ +10 (Effective only in Auto, One Push, VAR mode).

BG Tuning: Blue gain fine-tuning, optional items: -10 ~ +10 (Effective only in Auto, One Push, VAR mode).

Saturation: Optional items: 60% ~ 200%.

Hue: Optional items: 0 ~ 14.

AWB Sens:The white balance sensitivity, optional items: Low. Middle. High.

RG: Red gain, optional items: 0~255

(Effective only in Manual mode).

BG: Blue gain, optional items: 0~255

(Effective only in Manual mode).

Color Temp: Optional items: 2500K ~ 8000K (Effective only in VAR mode).

5.4 IMAGE

Move the main menu cursor to [IMAGE], and press [HOME] key enter the image page, as shown in the following figure.

IMAGE				
•	Luminance	7		
	Contrast	7		
	Sharpness	Auto		
	Flip-H	Off		
	Flip-V	Off		
	B&W-Mode	Off		
	Gamma	EXT		
	Style	Default		
▲▼Select Item ◀▶Change Value [Menu] Back				

Luminance: Brightness adjustment,optional items: 0 ~ 14.

Contrast: Contrast adjustment, optional items: $0 \sim 14$.

Sharpness: Sharpness adjustment,optional items: Auto, 0 ~ 15.

Flip-H: Image flipped horizontally, optional items: On. Off.

Flip-V: Image Flip Vertical, optional items: On, Off.

B&W-Mode: Optional items: On, Off. Gamma: Optional items: EXT, PC, 0.45,

0.5, 0.56, 0.63.

Style: Optional items: Default, Norm,Bright, PC.

5.5 P/T/Z

Move the main menu cursor to [P/T/Z], and press [HOME] key enter the P/T/Z page, as shown in the following figure.

P/T/Z				
	SpeedByZoom	On		
	AF-Zone	Front		
	AF-Sense	High		
	L/R Set	STD		
	Display Info	On		
	Image Freeze	Off		
	Digital Zoom	Off		
	Call Preset Speed	24		
	Pre Zoom Speed	5		
	▲ ▼Select Item			
	◆ Change Value			
	[Menu] Back			

SpeedByZoom: The depth of field scale switch, optional items:On, Off.

AF-Zone:Interested in focusing area, optional items: Front, Top, Center, Bottom.

AF-Sense: Automatic focusing sensitivity options, optional items: Low, Normal, High.


L/R Set: Optional items: STD, REV. Display Info: Optional items:On, Off. Image Freeze: Optional items:On, Off.

Digital Zoom: Optional items: Off, 2x, 4x, 8x, 16x.

Call Preset Speed: Optional items: 1 ~ 24. Pre Zoom Speed: Optional items: 0 ~ 7.

5.6 NOISE REDUCTION

Move the main menu cursor to [NOISE REDUCTION], and press [HOME] key enter the noise reduction page, as shown in the following figure.




NR2DLevel: 2D noise reduction, optional items: Off, Auto, $1 \sim 5$.

NR3DLevel: 3D noise reduction, optional items: Off, Auto, $1 \sim 8$.

5.7 SETUP

Move the main menu cursor to [SETUP], and press [HOME] key enter the setup page, as shown in the following figure.

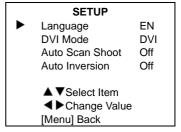

Language: Optional items: EN, Chinese, Russian.

DVI Mode: Optional items: DVI, HDMI. Auto Scan Shoot: Optional items:On, Off. Auto Inversion: Optional items:On, Off.

5.8 COMMUNICATION SETUP

Move the main menu cursor to [COMMUNICATION SETUP], and press [HOME] key enter the communication setup page, as shown in the following figure.

Protocol VISCA V_Address 1 V_AddrFix Off Net Mode Serial Baudrate 9600 ▼Select Item ▼Change Value [Menu] Back

Protocol: Control protocol type, optional items: Auto, VISCA, PELCO-D, PELCO-P.

V Address: Optional items: 1 ~ 7.

(Effective only in Auto, VISCAprotocol).

V_AddrFix: Optional items: On, Off (When set to On, useless in 88 30 01 FF Command).

P_D_Address: Optional items: 0 ~ 254. (Effective only in Auto, PELCO-D protocol).

P_P_Address: Optional items: 0 ~ 31.


(Effective only in Auto, PELCO-P protocol).

Net Mode: Set the serial port network control, optional items: Serial, Paral.

Baudrate: Serial port baud rate, optional items: 2400, 4800, 9600, 38400.

5.9 RESTORE DEFAULT

Move the main menu cursor to [RESTORE DEFAULT], and press [HOME] key enter the restore default page, as shown in the following figure.



Restore: Confirm restore factory settings, optional items: Yes, No.

Note: Press [HOME] button to confirm, all parameter restore default, include IR Remote address and VISICA address.

6 Network Function

6.1 Operating Environment

Operating System: Windows 2000/2003/XP/

vista/7/8/10

Network Protocol: TCP/IP

Client PC: P4/128M RAM/40G HDD/support scaled graphics card, support DirectX8.0 or more advanced version.

6.2 Equipment Installation

- Connect video conference camera to your internet or to your PC via network cable.
- 2) Turn on DC 12V power.
- 3) If the network connection is normal, the connection light (green) at the network interface will light up within 5 seconds, and the data indicator (orange) will flash, indicating that the physical connection of the camera has been completed.

6.3 Internet Connection

There are two main ways to connect video conference camera.



Connect by Network Cable



Connect by Switch/Router

6.4 Camera Controlled by LAN

6.4.1 Setup IP Address

If you don't know camera IP, view as below:

Method 1: Press * and # and 4 on remote controller one by one, the camera IP address will be shown on screen.


Method 2: Connect camera to PC with network cable, use "upgrade_En.exe" to search for IP address.



upgrade

Change IP address, two methods as below:

Method 1: Login the web page, select "Network > Lan Settings", change IP address, subnet mask and gateway. Click "Apply" and restart the camera.

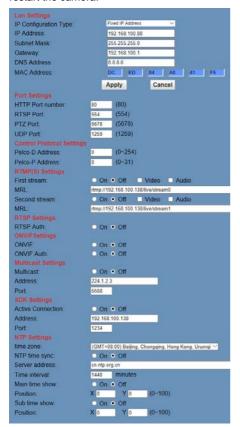

Method 2: Open "upgrade_En.exe", change IP and click "Set". After modified, the video conference camerawill be restart.



Change IP address:

- Step 1 Search the IP address of camera.
- **Step 2** Select the camera IP of you want to change.
- **Step 3** Select the config dialog of upgrade applets.
- **Step 4** Change the IP address, netmask and gateway, then click "Set".
- Step 5 Finish.

6.4.2 Visit/Access Camera

Input http://192.168.100.88 to IE (betterwith IE web browser,others will cause little latency),a login window pop up,input username: admin,password: admin, shown as below:



After login, shown as below:





If user first time use this camera by internet (only for new user), must install a player software (VLC). Please go to VLC website http://www.videolan.org/vlc/#download and Install VLC (player software). After installation, login again, will show as above.

6.5 Camera Controlled by WAN

6.5.1 Setup IPControlled by Dynamic DNS

Two dynamic DNS:Dyndns.org, 3322.org.

Router Port Mapping:

Take Tenda router for example, enter the Router Home Page (interface page), select "Advanced" - "Virtual Server", add a new port number in "Ext Port", add a new port number in "Int port", put camera IP address to "Internal IP", then select "Save", shown as below:



6.5.2 Dynamic DNS Visit Camera

Set domain name to camera, setup the parameter, then dynamic DNS can access camera. Access link: http://hostname: port number. For example, setup host computer name: youdomain. f3322.org, the camera port number is 89, the access link should behttp://youdomain.3322.org.89.




If the camera port default is 80,then unnecessary to input port number, use host name can access camera directly.

6.5.3 VLC Stream Media Player Monitor

Visit VLC Media Server Procedure

Step 1 Open VLC media player.

Step 2 Click "Media > Open Network Stream", or click "Ctrl+N": as below:

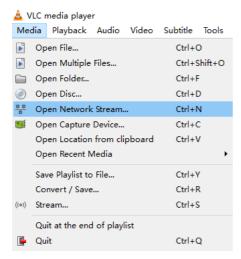


Step 3 Input URL address:

rtsp://ip: port number/1 (First stream); rtsp://ip: port number/2 (Second stream).

Step 4 Click "Play".



RTSP port number default 554.If the camera port default is 80,then unnecessary to input port number of URL address.

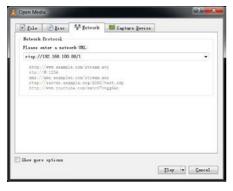

6.6 Camera Parameter Setup

6.6.1 Homepage Introduction

Menu

All pages include two menu bars:

Real time monitoring: displaying video imageParameter setup: with function buttons.

A. Video Viewing Window


Video viewing window must be same as video resolution, the bigger the resolution is, the bigger the playing area is. Double click viewing window, will show full-screen, double click again, will return to initialized size.

Status bar in viewing window shown as below:



- Video playback pause button: control real-time video pause, stop the last picture, click recoverable video again.
- Audio control buttons: can adjust the volume or set silent mode.
- 3) Full screen switch button.

B. PTZ Setup

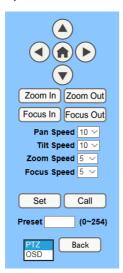

1) Pan and Tilt Control

Up,Down,Left andRight arrows and the home button allow you to manually drive the camera to the desired position.

2) Zoom

Zoom Inand Zoom Out buttons allow for wide or narrow view of the space.

3) Focus

FocusIn and Focus Out buttons allow for fine manual focus adjustment if the camera has any problems autofocusing on the difficult object.

4) PTZ Speeds

Pan speed can be set at any rate between $1 \sim 24$, Tilt speed can be set at any rate between $1 \sim 20$. Zoom and Focus speeds can be set at any rate between $0 \sim 7$.

5) PTZ Presets

After manually setting up a shot that you would like to return to later, you can save presets for quick recall of these positions. Type a number between 0 and 254 into the Preset box.


Click the "Set" button to save the current location with that preset number. Click the "Call" button to cause the camera to return to that position. This enables smooth, quick and convenient control without the need to manually drive the camera.

You can set up preset that user want as below. Method 1: Type a number into the Preset box.



Preset: Optional items: 0 ~ 254.

Method 2: Type the name into the Presets Information.

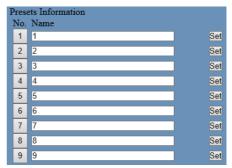

Click"Set"button,when PTZ turn to other position,click"Call"button or click"No." of the Presets Information, PTZ will turn back to preset position.

6) PTZ/OSD Dropdown


From the dropdown menu, clicking the OSD option will open the on-screen display menu of the camera giving you control from within the IP interface.

C. Language Selection



Click either "Chinese", "English" or "Russian" to change the language of the webpage.

6.6.2 Video Settings

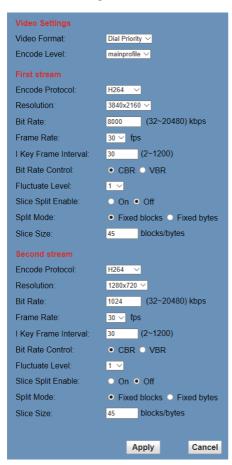

1) Video Format

Support 50Hz (PAL)and 60Hz (NTSC),and Dial Priority three formats.

2) Encode Level

Support baseline, mainprofile, highprofile and svc-t four levels.

3) Encode Protocol

Support H.264 and MJPEG twoprotocols, and only the first stream support MJPEG.

4) Resolution

First stream support 3840x2160. 1920x1080,1280x720,1024x576,960x540,640 x480,640x360.Second stream support1920x1080, 1280x720, 1024x576. 720x576(50Hz 720x480(60Hz support). 720x408, 640x360, support), 480x270, 320x240, 320x180; The bigger resolution is, the clearer the image will be, more network bandwidth will be taken.

5) Bit Rate

The user can specify the bit rate. Generally speaking, the larger of the bit rate, the clearer of the image. However, the configuration of the bit rate needs to be combined with the network bandwidth. When the network bandwidth is narrow and the bit rate is configuredlarger, the video stream cannot be transmitted normally, and the visual effect is worse.

6) Frame Rate

User can specify the size of the frame rate, generally, the frame rategreater, the image more smooth; Frame rate is smaller, the more sense of beating.

7) I Key Frame Interval

Set interval between 2 I frame,the bigger interval is the response will be lower from viewing window.

8) Bit Rate Control

Code stream control way:

Constant Bit Rate: Video coder will be coding according to preset speed.

Variable Bit Rate: Video coder will adjust the speed based on preset speed to gain the best image quality.

9) Fluctuate Level

Restrain the fluctuation magnitude of variable rate, grade 1 ~ 6.

10) Slice Split Enable

Enable or disable slice split function.

11) Split Mode

Select split mode, optional items: Fixed blocks, Fixed bytes.

12) Slice Size

Set the size of slice.

6.6.3 Image Settings



1) Brightness

Image bright 0~14, slider control, on the right shows the corresponding numerical.

Default value is 7.

2) Saturation

Saturation 0~14, slider control, on the right shows the corresponding numerical.

Default value is 4.

3) Contrast

Contrast0~14, slider control, on the right shows the corresponding numerical. Default value is 7.

4) Sharpness

Sharpness0~15 and auto, slider control, on the right shows the corresponding numerical.

Default value is auto.

5) Hue


Hue 0~14, slider control, on the right shows the corresponding numerical.

Default value is 7.

6) Flip & Mirror

Tick Flip to realize image upside down, tick mirror to realize image around the mirror. Default value is not tick.

6.6.4 Audio Settings

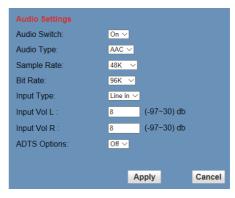

1) Audio Switch

Enable or disableaudio switch.

2) Audio Type

Audio type AAC.

3) Sample Rate

Optional items: 44.1K, 48K.

4) Bit Rate

Optional items: 96K, 128K, 256K.

5) Input Type

Optional items: Line in.

6) Input Vol L

The volume of the left channel.

7) Input VolR

The volume of the right channel.

8) ADTS Options

Optional items:On, Off.

6.6.5 System Settings



1) Work Mode

The default work mode is RTSP.

Optional items: RTSP, SDK, Multicast.


2) Reboot

Click the "Reboot" button, system restart.

3) Username and password

The user can modify the password (letters and Numbers only).

6.6.6 Network Settings

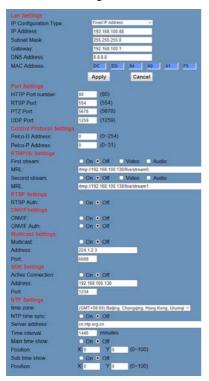

1) Lan Settings

Default the IP address is 192.168.100.88, the MAC address cannot be modified.

2) Port Settings

A. HTTP Port

IP address identifies the network device, the device can run multiple web applications, each network program using network port to transmit data, so data transmission to be carried out between the port and port. Port setting is to set upwebserver program using which port to transmit. Whenport mapping, need to be consistent with the port number(default port: 80).

B. RTSP Port

The video conference camera support RTSP protocol, use the VLC tools broadcast, default port: 554.

C. PTZ Port

Support TCP connection then control camera, default port: 5678.

D. UDP Port

Support UDP protocol, default port: 1259.

3) Control Protocol Settings

Setting the camera control communication protocol, include Viscaaddress,Pelco-D address and Pelco-P address.

4) RTMP Settings

Setting the MRL of RTMP, select enable or disable video and audio. You can select control code stream of "On", "Off", "Video", "Audio" between in the two streams.

5) RTSP Settings

Turn On/Off RTSP auth.

6) ONVIF Settings

Turn On/OffONVIF and ONVIF auth.

7) Multicast Settings

Turn On/Off multicast. Setting the multicast address (default value is 224.1.2.3) and port

(default value is 6688, then 6688 is the multicast port of the first stream; 6690 is the multicast port of the second stream).

8) SDK Settings

Turn On/Off active connection. Setting SDK address (default value is 192.168.100.138) and port (default value is 1234).

9) NTP Settings

Turn On/OffNTP time sync, main time show and sub time show. SettingNTP server address, time interval, main stream position and sub stream position.

6.6.7 Device Information

Display the current device information.



6.7 Download the Upgrade Program

If you need the camera upgrade program, please contact the manufacturer.

7 Maintenance and Troubleshooting

Camera Maintains

- If camera will not be used for a long time,
 please turn off power switch, disconnect
 AC power cord of AC adaptor to the outlet.
- Please use soft cloth or tissue to clean the camera cover.
- Please use the soft dry cloth to clean the lens. If the camera is very dirty, clean it with diluted neuter detergent. Do not use any type of solvents, which may damage the surface.

Unqualified Application

- No shooting extreme brightobjectfor a long period of time, such as sunlight, light sources, etc.
- No operating in unstable lighting conditions, otherwise image will be flickering.
- No operating close to powerful electromagnetic radiation, such as TV or radio transmitters, etc.

Troubleshooting Image

- The monitor shows no image
- Check that the camera power supply is connected, the voltage is normal, and the power indicator light is always on.
- Turn off the power switch to check whether the camera is self-testing.
- Check the cable of video platform and TV whether correct connection.
- Sometimes without the image

Check the cable of video platform and TV whether correct connection.

- Image have jitter when the camera lens at max multiple
- Check whether the camera installed position be stabled.
- Check whether have vibrating machinery or object near the camera.
- There is no video image in IE Browser

Please visit VLC website (http://www.videolan.org/vlc) download and install VLC media player, after it installed, visit video conference camera will have normal image display.

- Unable to access video conference camera through IE Browser
- Using PC to access the network to test whether the network access can work properly, first of all, the network fault caused by the PC virus can be eliminated, until the PC and video conference camera can communicate with each other Ping.
- Disconnect the network, connect video conference camera and PC separately, and reset the IP address of PC.
- Check IP address, subnet mask, and gateway settings for video conference camera.
- Check whether the MAC address is conflicts.
- 5) Check whether the web port is occupied by another device.
- Forget the IP address or login password

Please remember (The default IP address: 192.168.100.88; default user name: admin; default password: admin).

Control

- Remote control cannot control
- Check and replace the new battery for the remote controller.
- Check whether the camera working mode is correct.
- Check whether the address of remote control can match the camera.
- Serial port cannot control
- Check whether the camera protocol, address such is the same.
- Check whether the control line is connected well.

079.79.1100685_V1.0